

P. O. BOX 20669
Sarasota, FL 34276

Website www.taylorphaseguard.com

Ph. 941 925-3605
Fax 800 288-7117

Introducing


PHASE-GUARD REMOTE DISPLAY MODULE

Replacing the Remote LED option, the Remote Display Module installs easily and allows access of Phase-Guard function and features to move to a convenient panel location.

Remote Module – cable & Phase-Guard




Remote Module – Rear View

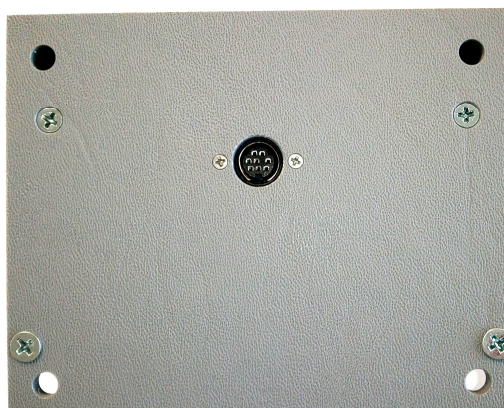

The remote display module requires four mounting holes and one hole for the cable connection. The 10 ft. cable provides flexibility for a suitable location.

Overall Module dimensions are 5" x 4" x 2 13/16". - 4 holes .25" and 1 hole .5" dia.

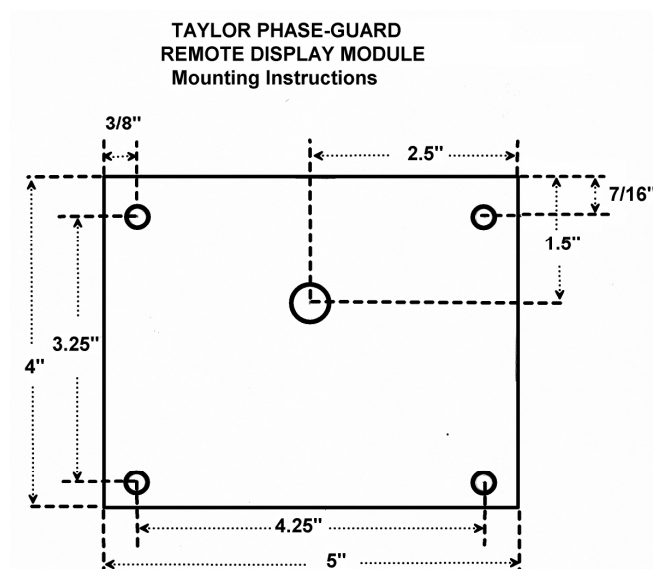

e-mail: sales@taylorphaseguard.com